# Low Voltage Synchronous Buck Controller

The CS5211 is a low voltage synchronous buck controller. It contains all required circuitry for a synchronous buck converter using external N–Channel MOSFETs. High current internal gate drivers are capable of driving high gate capacitance of low  $R_{\rm DS(on)}$  NFETs for better efficiency. The  $V^{\rm 2TM}$  control architecture is used to achieve unmatched transient response, the best overall regulation and the simplest loop compensation. The CS5211 is in a 14–pin package to allow the designer added flexibility.

The CS5211 provides overcurrent protection, undervoltage lockout. Soft Start and built in adaptive nonoverlap. The CS5211 also provides adjustable fixed frequency range of 150 kHz to 750 kHz. This gives the designer more flexibility to make efficiency and component size compromises. The CS5211 will operate over a 4.5 V to 14 V range using either single of dual input voltage.

#### **Features**

- Switching Regulator Controller
  - N-Channel Synchronous Buck Design
  - V<sup>2</sup> Control Topology
  - 200 ns Transient Response
  - Programmable Fixed Frequency of 150 kHz-750 kHz
  - 1.0 V 1.5% Internal Reference
  - Lossless Inductor Sensing Overcurrent Protection
  - Hiccup Mode Short Circuit Protection
  - Programmable Soft Start
  - 40 ns GATE Rise and Fall Times (3.3 nF Load)
  - 70 ns Adaptive FET Nonoverlap Time
  - Differential Remote Sense Capability
- System Power Management
  - 5.0 V or 12 V Operation
  - Undervoltage Lockout
  - On/Off Control Through Use of the COMP Pin




## ON Semiconductor\*

http://onsemi.com



Α

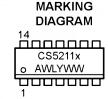


x = E or G

= Assembly Location

WL, L = Wafer Lot YY, Y = Year WW, W = Work Week

#### **PIN CONNECTIONS**

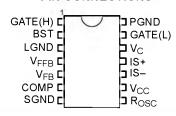

#### ORDERING INFORMATION

See detailed ordering and shipping information in the package dimensions section on page 1594 of this data sheet.

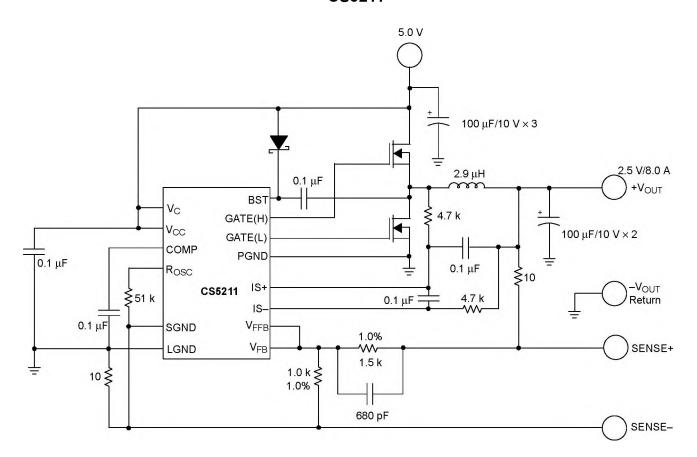


Figure 1. Application Diagram, 5.0 V to 2.5 V/8.0 A Converter with Differential Remote Sense

#### **MAXIMUM RATINGS\***

Rating			Unit
Operating Junction Temperature, T <sub>J</sub>		150	°C
Lead Temperature Soldering:	Reflow: (SMD styles only) (Note 1)	230 peak	°C
Storage Temperature Range, T <sub>S</sub>		-65 to +150	°C
Package Thermal Resistance: Junction–to–Case, $R_{\theta JC}$ Junction–to–Ambient, $R_{\theta JA}$		30 125	°C/W
ESD Susceptibility (Human Body Model)		2.0	kV
JEDEC Moisture Sensitivity		1.0	-

<sup>1. 60</sup> second maximum above 183°C.

#### **MAXIMUM RATINGS**

Pin Name	Pin Symbol	V <sub>MAX</sub>	V <sub>MIN</sub>	I <sub>SOURCE</sub>	Isink
IC Power Input	V <sub>CC</sub>	16 V	-0.3 V	N/A	50 mA DC
Power input for the low side driver	V <sub>C</sub>	16 V	-0.3 V	N/A	1.5 A Peak, 200 mA DC
Power Supply input for the high side driver	BST	20 V	-0.3 V	N/A	1.5 A Peak, 200 mA DC
Compensation Capacitor	COMP	6.0 V	-0.3 V	1.0 mA	1.0 mA
Voltage Feedback Input	V <sub>FB</sub>	6.0 V	-0.3 V	1.0 mA	1.0 mA
Oscillator Resistor	R <sub>OSC</sub>	6.0 V	-0.3 V	1.0 mA	1.0 mA

<sup>\*</sup>The maximum package power dissipation must be observed.

#### **MAXIMUM RATINGS (continued)**

Pin Name	Pin Symbol	V <sub>MAX</sub>	V <sub>MIN</sub>	Isource	I <sub>SINK</sub>
Fast Feedback Input	V <sub>FFB</sub>	6.0 V	-0.3 V	1.0 mA	1.0 mA
High-Side FET Driver	GATE(H)	20 V	-0.3 V -2.0 V for 50 ns	1.5 A Peak 200 mA DC	1.5 A Peak 200 mA DC
Low-Side FET Driver	GATE(L)	16 V	-0.3 V -2.0 V for 50 ns	1.5 A Peak 200 mA DC	1.5 A Peak 200 mA DC
Positive Current Sense	IS+	6.0 V	-0.3 V	1.0 mA	1.0 mA
Negative Current Sense	IS-	6.0 V	–0.3 V	1.0 mA	1.0 mA
Power Ground	PGND	0.3 V	-0.3 V	1.5 A Peak, 200 mA DC	N/A
Logic Ground	LGND	0 V	0 V	100 mA	N/A
Sense Ground	SGND	0.3 V	-0.3 V	1.0 mA	1.0 mA

## **ELECTRICAL CHARACTERISTICS** ( $-40^{\circ}\text{C} < T_{A} < 85^{\circ}\text{C}$ ; $-40^{\circ}\text{C} < T_{J} < 125^{\circ}\text{C}$ ; $4.5 \text{ V} < V_{CC}$ , $V_{C} < 14 \text{ V}$ ; 7.0 V < BST < 20 V; $C_{\text{GATE(H)}} = C_{\text{GATE(L)}} = 3.3 \text{ nF}$ ; $R_{\text{OSC}} = 51 \text{ k}$ ; $C_{\text{COMP}} = 0.1 \text{ }\mu\text{F}$ , unless otherwise specified.)

Characteristic	Test Conditions	Min	Тур	Max	Unit
Error Amplifier					
V <sub>FB</sub> Bias Current	V <sub>FB</sub> = 0 V	_	0.1	1.0	μА
COMP Source Current	V <sub>FB</sub> = 0.8 V	15	30	60	μА
COMP SINK Current	V <sub>FB</sub> = 1.2 V	15	30	60	μА
Open Loop Gain	-	-	98	_	dB
Unity Gain Bandwidth	C = 0.1 μF	_	50	_	kHz
PSRR @ 1.0 kHz	-	-	70	_	dB
Output Transconductance	-	-	32	_	mmho
Output Impedance	-	_	2.5	_	MΩ
Reference Voltage	-0.1 V < SGND < 0.1 V, COMP = V <sub>FB</sub> , Measure V <sub>FB</sub> to SGND	0.977	0.992	1.007	V
COMP Max Voltage	V <sub>FB</sub> = 0.8 V	2.5	3.0	_	V
COMP Min Voltage	V <sub>FB</sub> = 1.2 V	-	0.1	0.2	V
GATE(H) and GATE(L)					
High Voltage (AC)	$\begin{aligned} &GATE(L),\\ &GATE(H)\\ &0.5\;nF$	V <sub>C</sub> – 0.5 BST – 0.5	-	1	V
Low Voltage (AC)	GATE(L) or GATE(H) 0.5 nF < $C_{GATE(H)}$ ; $C_{GATE(L)}$ < 10 nF	-	-	0.5	V
Rise Time	V <sub>C</sub> = BST = 10 V, Measure: 1.0 V < GATE(L) < 9.0 V, 1.0 V < GATE(H) < 9.0 V	-	40	80	ns
Fall Time	V <sub>C</sub> = BST = 10 V, Measure: 1.0 V < GATE(L) < 9.0 V, 1.0 V < GATE(H) < 9.0 V	_	40	80	ns
GATE(H) to GATE(L) Delay	GATE(H) < 2.0 V, GATE(L) > 2.0 V	40	70	110	ns
GATE(L) to GATE(H) Delay	GATE(L) < 2.0 V, GATE(H) > 2.0 V	40	70	110	ns

<sup>2.</sup> Guaranteed by design. Not tested in production.

GATE(H)/(L) Pull-Down

20

115

 $\mathsf{K}\Omega$ 

Resistance to PGND

**ELECTRICAL CHARACTERISTICS (continued)** ( $-40^{\circ}$ C <  $T_A$  <  $85^{\circ}$ C;  $-40^{\circ}$ C <  $T_J$  <  $125^{\circ}$ C; 4.5 V <  $V_{CC}$ ,  $V_C$  < 14 V; 7.0 V < BST < 20 V;  $C_{GATE(H)} = C_{GATE(L)} = 3.3$  nF;  $R_{OSC} = 51$  k;  $C_{COMP} = 0.1$   $\mu$ F, unless otherwise specified.)

Characteristic	Test Conditions	Min	Тур	Max	Unit
Overcurrent Protection					
OVC Comparator Offset Voltage	0 V < IS+ < V <sub>CC</sub> , 0 V < IS- < V <sub>CC</sub>	54	60	66	mV
IS+ Bias Current	0 V < IS+ < V <sub>CC</sub>	-1.0	0.1	1.0	μА
IS- Bias Current	0 V < IS- < V <sub>CC</sub>	-1.0	0.1	1.0	μΑ
COMP Discharge Threshold	-	0.20	0.25	0.30	V
COMP Discharge Current in OVC Fault Mode	COMP = 1.0 V	2.0	5.0	8.0	μА
PWM Comparator			-		
Transient Response	COMP = 0 – 1.5 V, V <sub>FFB</sub> , 20 mV overdrive	_	100	200	ns
PWM Comparator Offset	V <sub>FB</sub> = V <sub>FFB</sub> = 0 V; Increase COMP until GATE(H) starts switching	0.425	0.475	0.525	V
Artificial Ramp	Duty Cycle = 90%	40	70	100	mV
V <sub>FFB</sub> Bias Current	V <sub>FFB</sub> = 0 V	_	0.1	1.0	μΑ
V <sub>FFB</sub> Input Range	Note 3.	-	-	1.1	V
Minimum Pulse Width	-	_	-	200	ns
Oscillator					
Switching Frequency	R <sub>OSC</sub> = 18 k	600	750	900	kHz
Switching Frequency	R <sub>OSC</sub> = 51 k	240	300	360	kHz
Switching Frequency	R <sub>OSC</sub> = 96 k	120	150	180	kHz
R <sub>OSC</sub> Voltage	-	1.21	1.25	1.29	V
General Electrical Specifications					
V <sub>CC</sub> Supply Current	COMP = 0 V (no switching)	_	5.0	8.0	mA
BST/V <sub>C</sub> Supply Current	COMP = 0 V (no switching)	-	2.0	3.0	mA
Start Threshold	GATE(H) Switching, COMP Charging	3.90	4.05	4.20	V
Stop Threshold	GATE(H) Not Switching, COMP Not Charging	3.75	3.90	4.05	V
Hysteresis	Start-Stop	100	150	200	mV
Sense Ground Current	Note 3.	_	0.15	1.00	mA

<sup>3.</sup> Recommended maximum operating voltage between the three grounds is 200 mV.

## PACKAGE PIN DESCRIPTION

PIN NO.	PIN SYMBOL	FUNCTION
1	GATE(H)	High Side Switch FET driver pin. Capable of delivering peak currents of 1.0 A.
2	BST	Power supply input for the high side driver.
3	LGND	Reference ground. All control circuits are referenced to this pin. IC substrate connection.
4	V <sub>FFB</sub>	Input for the PWM comparator.
5	V <sub>FB</sub>	Error amplifier input.
6	COMP	Error Amp output. PWM Comparator reference input. A capacitor to LGND provides error amp compensation.
7	SGND	Internal reference is connected to this ground. Connect directly at the load for ground remote sensing.
8	R <sub>OSC</sub>	A resistor from this pin to SGND sets switching frequency.
9	V <sub>CC</sub>	Input Power Supply Pin. It supplies power to control circuitry. A 0.1 $\mu\text{F}$ Decoupling cap is recommended.
10	IS-	Negative input for overcurrent comparator.
11	IS+	Positive input for overcurrent comparator.
12	V <sub>C</sub>	Power supply input for the low side driver.
13	GATE(L)	Low Side Synchronous FET driver pin. Capable of delivering peak currents of 1.0 A.
14	PGND	High Current ground for the GATE(H) and GATE(L) pins.

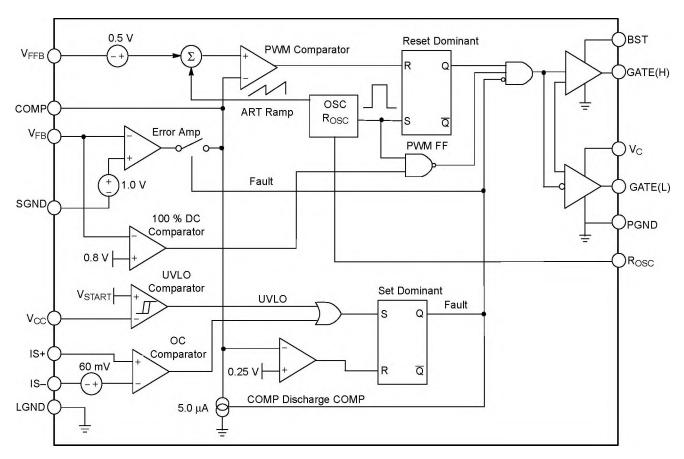


Figure 2. Block Diagram

#### THEORY OF OPERATION

#### V<sup>2</sup> Control Method

The  $V^2$  method of control uses a ramp signal that is generated by the ESR of the output capacitors. This ramp is proportional to the AC current through the main inductor and is offset by the value of the DC output voltage. This control scheme inherently compensates for variations in either line or load conditions, since the ramp signal is generated from the output voltage itself. This control scheme differs from traditional techniques such as voltage mode, which generates an artificial ramp, and current mode, which generates a ramp from inductor current.

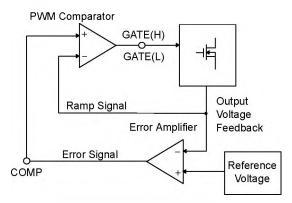


Figure 3. V<sup>2</sup> Control Block Diagram

The  $V^2$  control method is illustrated in Figure 3. The output voltage is used to generate both the error signal and the ramp signal. Since the ramp signal is simply the output voltage, it is affected by any change in the output regardless of the origin of the change. The ramp signal also contains the DC portion of the output voltage, which allows the control circuit to drive the main switch to 0% or 100% duty cycle as required.

A change in line voltage changes the current ramp in the inductor, affecting the ramp signal, which causes the  $V^2$  control scheme to compensate the duty cycle. Since the change in the inductor current modifies the ramp signal, as in current mode control, the  $V^2$  control scheme has the same advantages in line transient response.

A change in load current will have an effect on the output voltage, altering the ramp signal. A load step immediately changes the state of the comparator output, which controls the main switch. Load transient response is determined only by the comparator response time and the transition speed of the main switch. The reaction time to an output load step has no relation to the crossover frequency of the error signal loop, as in traditional control methods.

The error signal loop can have a low crossover frequency, since transient response is handled by the ramp signal loop. The main purpose of this "slow" feedback loop is to provide DC accuracy. Noise immunity is significantly improved, since the error amplifier bandwidth can be rolled off at a low frequency. Enhanced noise immunity improves remote sensing of the output voltage, since the noise associated with long feedback traces can be effectively filtered.

Line and load regulations are drastically improved because there are two independent voltage loops. A voltage mode controller relies on a change in the error signal to compensate for a deviation in either line or load voltage. This change in the error signal causes the output voltage to change corresponding to the gain of the error amplifier, which is normally specified as line and load regulation. A current mode controller maintains fixed error signal under deviation in the line voltage, since the slope of the ramp signal changes, but still relies on a change in the error signal for a deviation in load. The V<sup>2</sup> method of control maintains a fixed error signal for both line and load variations, since both line and load affect the ramp signal.

#### **Constant Frequency Operation**

The CS5211 uses a constant frequency, trailing edge modulation architecture for generating PWM signal. During normal operation, the oscillator generates a narrow pulse at the beginning of each switching cycle to turn on the main switch. The main switch will be turned off when the ramp signal intersects with the output of the error amplifier (COMP pin voltage). Therefore, the switch duty cycle can be modified to regulate the output voltage to the desired value as line and load conditions change.

The major advantage of constant frequency operation is that the component selections, especially the magnetic component design, become very easy. The oscillator frequency of CS5211 is programmable from 150 kHz to 750 kHz using an external resistor connected from the  $R_{\rm OSC}$  pin to ground.

#### Start-Up

If there are no fault conditions and the fault latch is reset, the error amplifier will start charging the COMP pin capacitor after the CS5211 is powered up. The output of the error amplifier (COMP voltage) will ramp up linearly. The COMP capacitance and the source current of the error amplifier determine the slew rate of COMP voltage. The output of the error amplifier is connected internally to the inverting input of the PWM comparator and it is compared with the  $V_{FFB}$  pin voltage plus 0.5 V offset at the non–inverting input of the PWM comparator. Since  $V_{FFB}$  voltage is zero before the start–up, the PWM comparator output will stay high until the COMP pin voltage hits 0.5 V. There is no switching action while the PWM comparator output is high.

After the COMP voltage exceeds the 0.5 V offset, the output of PWM comparator toggles and releases the PWM latch. The narrow pulse generated by the oscillator at the beginning of the next oscillator cycle will set the latch so that the main switch can be turned on and the regulator output voltage ramps up. When the output voltage achieves a level set by the COMP voltage, the main switch will be turned off. The V<sup>2</sup> control loop will adjust the main switch duty cycle as required to ensure the regulator output voltage tracks the

COMP voltage. Since the COMP voltage increases gradually, the Soft–Start can be achieved. The start–up period ends when the output voltage reaches the level set by the external resistor divider.

#### **Output Enable**

Since there can be no switching until the COMP pin exceeds the 0.5 V offset built into the PWM comparator, the COMP pin can also be used for an enable function. Hold the COMP pin below 0.4 V with an open collector circuit to disable the output. When the COMP pin is released to enable start—up, the user must ensure there is no leakage current from the enable circuit into COMP. During normal operation the COMP output is driven with only 5.0  $\mu A$  to 30  $\mu A$  internally.

#### **Hiccup Mode Overcurrent Protection**

Under normal load conditions, the voltage across the IS+ and IS- pins is less than the 60 mV overcurrent threshold. If the threshold is exceeded, the overcurrent fault latch is set, the high side gate driver is forced low, and the COMP pin is discharged with 5.0  $\mu A$ . There is no switching until the COMP voltage drops below a 0.25 V threshold. Then, the fault latch is cleared and a soft–start is initiated. The low effective duty cycle during hiccup overcurrent greatly reduces component stress for an extended fault.

#### **Inductor Current Sensing**

Besides using a current sense resistor to sense inductor current. CS5211 provides the users with the possibility of using loss—less inductor sensing technique. This sensing technique utilizes the Equivalent Series Resistance (ESR) of the inductor to sense the current. The output current is sensed through an RC network in parallel with the inductor as shown in Figure 4. The voltage across the small capacitor is then fed to the OC comparator.

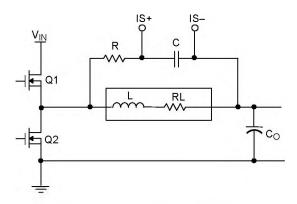


Figure 4. Inductor Current Sensing

If the values of R and C are chosen such that:

$$\frac{L}{R_I} = RC$$

Then the voltage across the capacitor C will be:

$$V_C = R_L I_L$$

Therefore, if the time constant of the RC network is equal to that of the inductor, the voltage across the capacitor is proportional to the inductor current by a factor of the inductor ESR. In practice, the user should ensure that under all component tolerances, the RC time constant is larger than the L/R time constant. This will keep the high frequency gain for  $V_C(s)/I_L(s)$  less than the low frequency gain, and avoid unnecessary OCP tripping during short duration overcurrent situations.

Compared with conventional resistor sensing, the inductor ESR current sensing technique is lossless, but is not as accurate due to variation in the ESR from inductor to inductor and over temperature. For typical inductor ESR, the 0.39%/°C positive temperature coefficient will reduce the current limit at high temperature, and will help prevent thermal runaway, but will force an increased design target at room temperature. This technique can be more accurate than using a PCB trace, since PCB copper thickness can vary 10–20%, compared to 1% variation in wire diameter thickness typical of inductors.

#### **Remote Voltage Sensing**

The CS5211 has the capability to sense the voltage when the load is located far away from the regulator. The SGND pin is dedicated to the differential remote sensing. The negative remote sense line is connected to SGND pin directly, while the positive remote sense line is usually connected to the top of the feedback voltage divider. To prevent over–voltage condition caused by open remote sense lines, the divider should also be locally connected to the output of the regulator through a low value resistor. That resistor is used to compensate for the voltage drop across the output power cables.

#### **APPLICATIONS INFORMATION**

#### APPLICATIONS AND COMPONENT SELECTION

#### **Inductor Component Selection**

The output inductor may be the most critical component in the converter because it will directly effect the choice of other components and dictate both the steady-state and transient performance of the converter. When selecting an inductor the designer must consider factors such as DC current, peak current, output voltage ripple, core material, magnetic saturation, temperature, physical size, and cost (usually the primary concern).

In general, the output inductance value should be as low and physically small as possible to provide the best transient response and minimum cost. If a large inductance value is used, the converter will not respond quickly to rapid changes in the load current. On the other hand, too low an inductance value will result in very large ripple currents in the power components (MOSFETs, capacitors, etc) resulting in increased dissipation and lower converter efficiency. Also, increased ripple currents will force the designer to use higher rated MOSFETs, oversize the thermal solution, and use more, higher rated input and output capacitors – the converter cost will be adversely effected.

One method of calculating an output inductor value is to size the inductor to produce a specified maximum ripple current in the inductor. Lower ripple currents will result in less core and MOSFET losses and higher converter efficiency. The following equation may be used to calculate the minimum inductor value to produce a given maximum ripple current ( $\alpha \bullet I_{O,MAX}$ ). The inductor value calculated by this equation is a minimum because values less than this will produce more ripple current than desired. Conversely, higher inductor values will result in less than the maximum ripple current.

$$Lo_{MIN} = (Vin - Vout) \cdot Vout/(\alpha \cdot IO_{MAX} \cdot Vin \cdot f_{SW})$$

 $\alpha$  is the ripple current as a percentage of the maximum output current ( $\alpha=0.15$  for  $\pm15\%$ ,  $\alpha=0.25$  for  $\pm25\%$ , etc) and  $f_{sw}$  is the switching frequency. If the minimum inductor value is used, the inductor current will swing  $\pm\,\alpha/2\%$  about Iout. Therefore, the inductor must be designed or selected such that it will not saturate with a peak current of  $(1+\alpha/2)$ 

• I<sub>O.MAX</sub>.

Power dissipation in the inductor can now be calculated from the RMS current level. The RMS of the AC component of the inductor is given by the following relationship:

$$IAC = \frac{IPP}{\sqrt{12}}$$

where IPP =  $\alpha \bullet I_{O,MAX}$ .

The total I<sub>RMS</sub> of the current will be calculated from:

$$I_{RMS} = \sqrt{I_{OUT}^2 + I_{AC}^2}$$

The power dissipation for the inductor can be determined from:

$$P = I_{RMS}^2 \times R_I$$

#### **Input Capacitor Selection and Considerations**

The input capacitor is used to reduce the current surges caused by conduction of current of the top pass transistor charging the PWM inductor.

The input current is pulsing at the switching frequency going from 0 to peak current in the inductor. The duty factor will be a function of the ratio of the input to output voltage and of the efficiency.

$$DF = \frac{V_O}{V_I} \times \frac{1}{Eff}$$

The RMS value of the ripple into the input capacitors can now be calculated:

$$IIN(RMS) = IOUT\sqrt{DF - DF^2}$$

The input RMS is maximum at 50% DF, so selection of the possible duty factor closest to 50% will give the worst case dissipation in the capacitors. The power dissipation of the input capacitors can be calculated by multiplying the square of the RMS current by the ESR of the capacitor.

#### **Output Capacitor**

The output capacitor filters output inductor ripple current and provides low impedance for load current changes. The effect of the capacitance for handling the power supply induced ripple will be discussed here. Effects of load transient behavior can be considered separately.

The principle consideration for the output capacitor is the ripple current induced by the switches through the inductor. This ripple current was calculated as  $I_{AC}$  in the above discussion of the inductor. This ripple component will induce heating in the capacitor by a factor of the RMS current squared multiplied by the ESR of the output capacitor section. It will also create output ripple voltage.

The ripple voltage will be a vector summation of the ripple current times the ESR of the capacitor, plus the ripple current integrating in the capacitor, and the rate of change in current times the total series inductance of the capacitor and connections.

The inductor ripple current acting against the ESR of the output capacitor is the major contributor to the output ripple voltage. This fact can be used as a criterion to select the output capacitor.

$$Vpp = Ipp \times CFSR$$

The power dissipation in the output capacitor can be calculated from:

$$P = I_{AC}^2 \times C_{FSR}$$

where

 $I_{AC}$  = AC RMS of the inductor

C<sub>ESR</sub> = Effective series resistance of the output capacitor network.

#### **MOSFET & Heatsink Selection**

Power dissipation, package size, and thermal solution drive MOSFET selection. To adequately size the heat sink, the design must first predict the MOSFET power dissipation. Once the dissipation is known, the heat sink thermal impedance can be calculated to prevent the specified maximum case or junction temperatures from being exceeded at the highest ambient temperature. Power dissipation has two primary contributors: conduction losses and switching losses. The control or upper MOSFET will display both switching and conduction losses. The synchronous or lower MOSFET will exhibit only conduction losses because it switches into nearly zero voltage. However, the body diode in the synchronous MOSFET will suffer diode losses during the non–overlap time of the gate drivers.

For the upper or control MOSFET, the power dissipation can be approximated from:

$$\begin{aligned} & \text{PD,CONTROL} = (\text{IRMS,CNTL}^2 \cdot \text{RDS(on)}) \\ & + (\text{ILo,MAX} \cdot \text{Qswitch/Ig} \cdot \text{VIN} \cdot \text{fsW}) \\ & + (\text{Qoss/2} \cdot \text{VIN} \cdot \text{fsW}) + (\text{VIN} \cdot \text{QRR} \cdot \text{fsW}) \end{aligned}$$

The first term represents the conduction or IR losses when the MOSFET is ON while the second term represents the switching losses. The third term is the losses associated with the *control and synchronous* MOSFET output charge when the control MOSFET turns ON. The output losses are caused by both the control and synchronous MOSFET but are dissipated only in the control FET. The fourth term is the loss due to the reverse recovery time of the body diode in the *synchronous* MOSFET. The first two terms are usually adequate to predict the majority of the losses.

Where  $I_{RMS,CNTL}$  is the RMS value of the trapezoidal current in the control MOSFET:

$$|RMS,CNTL| = \sqrt{D} \cdot [(|I_{LO,MAX}|^2 + |I_{LO,MAX}|^2 + |I_{LO,MIN}|^2)/3]^{1/2}$$

I<sub>Lo,MAX</sub> is the maximum output inductor current:

$$I_{Lo,MAX} = I_{O,MAX}/2 + \Delta I_{Lo}/2$$

 $I_{Lo,MIN}$  is the minimum output inductor current:  $I_{Lo,MIN} = I_{O,MAX}/2 - \Delta I_{Lo}/2$ 

 $I_{O,MAX}$  is the maximum converter output current. D is the duty cycle of the converter:

$$D = VOUT/VIN$$

 $\Delta I_{Lo}$  is the peak-to-peak ripple current in the output inductor of value Lo:

$$\Delta I_{LO} = (V_{IN} - V_{OUT}) \cdot D/(Lo \cdot f_{SW})$$

 $R_{DS(on)}$  is the ON resistance of the MOSFET at the applied gate drive voltage.

Q<sub>switch</sub> is the post gate threshold portion of the gate-to-source charge plus the gate-to-drain charge. This

may be specified in the data sheet or approximated from the gate-charge curve as shown in the Figure 5.

$$Q_{switch} = Q_{qs2} + Q_{qd}$$

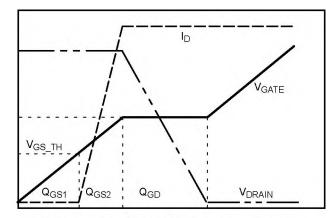


Figure 5. MOSFET Switching Characteristics

Ig is the output current from the gate driver IC.

V<sub>IN</sub> is the input voltage to the converter.

f<sub>sw</sub> is the switching frequency of the converter.

 $Q_G$  is the MOSFET total gate charge to obtain  $R_{DS(on)}$ . Commonly specified in the data sheet.

 $V_g$  is the gate drive voltage.

Q<sub>RR</sub> is the reverse recovery charge of the *lower* MOSFET. Q<sub>oss</sub> is the MOSFET output charge specified in the data sheet.

For the lower or synchronous MOSFET, the power dissipation can be approximated from:

$$\begin{split} \text{PD,SYNCH} &= (\text{IRMS,SYNCH}^2 \cdot \text{RDS(on)}) \\ &+ (\text{Vfdiode} \cdot \text{IO,MAX/2} \cdot \text{t\_nonoverlap} \cdot \text{fSW}) \end{split}$$

The first term represents the conduction or IR losses when the MOSFET is ON and the second term represents the diode losses that occur during the gate non-overlap time.

All terms were defined in the previous discussion for the control MOSFET with the exception of:

$$\label{eq:loss_energy} \begin{split} & \text{IRMS,SYNCH} = \sqrt{1 - D} \\ & \cdot [(\text{I}_{\text{Lo},\text{MAX}}^2 + \text{I}_{\text{Lo},\text{MAX}} \cdot \text{I}_{\text{Lo},\text{MIN}} + \text{I}_{\text{Lo},\text{MIN}}^2)/3]^{1/2} \end{split}$$

where:

Vf<sub>diode</sub> is the forward voltage of the MOSFET's intrinsic diode at the converter output current.

t\_nonoverlap is the non-overlap time between the upper and lower gate drivers to prevent cross conduction. This time is usually specified in the data sheet for the control IC.

When the MOSFET power dissipations are known, the designer can calculate the required thermal impedance to maintain a specified junction temperature at the worst case ambient operating temperature

$$\theta_T < (T_J - T_A)/P_D$$

where;

 $\theta_T$  is the total thermal impedance ( $\theta_{JC} + \theta_{SA}$ ).

 $\theta_{JC}$  is the junction–to–case thermal impedance of the MOSFET.

 $\theta_{SA}$  is the sink-to-ambient thermal impedance of the heatsink assuming direct mounting of the MOSFET (no thermal "pad" is used).

 $T_J$  is the specified maximum allowed junction temperature.

 $T_A$  is the worst case ambient operating temperature.

For TO–220 and TO–263 packages, standard FR–4 copper clad circuit boards will have approximate thermal resistances ( $\theta_{SA}$ ) as shown below:

Pad Size (in <sup>2</sup> /mm <sup>2</sup> )	Single–Sided 1 oz. Copper
0.5/323	60–65°C/W
0.75/484	55–60°C/W
1.0/645	50–55°C/W
1.5/968	45–50°C/W
2.0/1290	38–42°C/W
2.5/1612	33–37°C/W

As with any power design, proper laboratory testing should be performed to insure the design will dissipate the required power under worst case operating conditions. Variables considered during testing should include maximum ambient temperature, minimum airflow, maximum input voltage, maximum loading, and component variations (i.e. worst case MOSFET R<sub>DS(on)</sub>). Also, the inductors and capacitors share the MOSFET's heatsinks and will add heat and raise the temperature of the circuit board and MOSFET. For any new design, its advisable to have as much heatsink area as possible – all too often new designs are found to be too hot and require re–design to add heatsinking.

#### **Compensation Capacitor Selection**

The nominal output current capability of the error amp is  $30 \,\mu\text{A}$ . This current charging the capacitor on the COMP pin is used as soft start for the converter. The COMP pin is going to ramp up to a voltage level that is within 70 mV of what  $V_{FFB}$  is going to be when in regulation. This is the voltage that will determine the soft start. Therefore, the COMP capacitor can be established by the following relationship:

$$C = 30 \mu A \times \frac{\text{soft start}}{\text{VFFB(REG)}}$$

where:

soft start = output ramp-up time  $V_{FFB(REG)} = V_{FFB}$  voltage when in regulation  $30~\mu A = COMP$  output current, typ.

The COMP output current range is given in the data sheet and will affect the ramp—up time. The value of the capacitor on the COMP pin will have an effect on the loop response and the transient response of the converter. Transient response can be enhanced by the addition of a parallel combination of a resistor and capacitor between the COMP pin and the comp capacitor.

#### **Rosc Selection**

The switching frequency is programmed by selecting the resistor connected between the R<sub>OSC</sub> pin and SGND (pin 7). The grounded side of this resistor should be directly connected to the SGND pin, without any other currents flowing between the bottom of the resistor and the pin. Also, avoid running any noisy signals under the resistor, since injected noise could cause frequency jitter. The graph in Figure 6 shows the required resistance to program the frequency. Below 500 kHz, the following formula is accurate:

$$R = 13500/f_{SW} + 6 k\Omega$$

where f<sub>SW</sub> is the switching frequency in kHz.

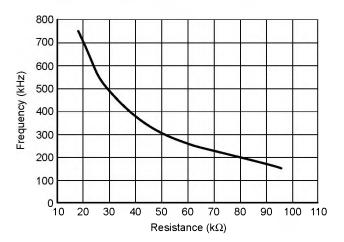


Figure 6. Frequency vs. Rosc

## **Differential Remote Sense Operation**

The ability to implement fully differential remote sense is provided by the CS5211. The positive remote sense is implemented by bringing the output remote sense connection to the positive load connection. A low value resistor is connected from Vout to the feedback point at the regulator to provide feedback in the instance when the remote sense point is not connected.

The negative remote sense connection is provided by connecting the SGND of the CS5211 to the negative of the load return. Again, a low value resistor should be connected between SGND and LGND at the regulator to provide feedback in the instance when the remote sense point is not connected. The maximum voltage differential between the three grounds for this part is 200 mV.

#### **Feedback Divider Selection**

The feedback voltage measured at  $V_{FB}$  during normal regulation will be 1.0 V. This voltage is compared to an internal 1.0 V reference and is used to regulate the output voltage. The bias current into the error amplifier is 1.0  $\mu$ A max, so select the resistor values so that this current does not add an excessive offset voltage.

#### V<sub>FFB</sub> Feedback Selection

To take full advantage of the  $V^2$  control scheme, a small amount of output ripple must be fed back to the  $V_{FFB}$  pin, typically 50 mV. For most application, this requirement is simple to achieve and the  $V_{FFB}$  can be connected directly to the  $V_{FB}$  pin. There are some application that have to meet stringent load transient requirements. One of the key factor in achieving tight dynamic voltage regulation is low ESR. Low ESR at the regulator output results in low output voltage ripple. This situation could result in increase noise sensitivity and a potential for loop instability. In applications where the output ripple is not sufficient, the performance of the CS5211 can be improved by adding a fixed amount external ramp compensation to the  $V_{FFB}$  pin. Refer to Figure 7, the amount of ramp at the  $V_{FFB}$  pin depends on the switch node Voltage, Feedback Voltage, R1 and C2.

$$Vramp = (Vsw - V_{FB}) \times ton/(R1 \times C2)$$

where:

Vramp = amount of ramp needed;

Vsw = switch note voltage;

 $V_{FB}$  = voltage feedback, 1 V;

ton = switch on-time.

To minimize the lost in efficiency R1 resistance should be large, typically 100 k or larger. With R1 chosen, C2 can be determined by the following;

$$C2 = (Vsw - V_{FB}) \times ton/(R1 \times Vramp)$$

C1 is used as a bypass capacitor and its value should be equal to or greater than C2.

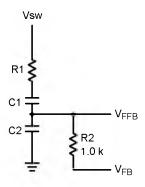


Figure 7. Small RC Filter Providing the Proper Voltage Ramp at the Beginning of Each On-Time Cycle

#### **Maximum Frequency Operation**

The minimum pulse width may limit the maximum operating frequency. The duty factor, given by the output/input voltage ratio, multiplied by the period determines the pulse width during normal operation. This pulse width must be greater than 200 ns, or duty cycle jitter could become excessive. For low pulse widths below 300 ns, external slope compensation should be added to the  $V_{FFB}$  pin to increase the PWM ramp signal and improve stability. 50 mV of added ramp at the  $V_{FFB}$  pin is typically enough.

#### **Current Sense Component Selection**

The current limit threshold is set by sensing a 60 mV voltage differential between the IS+ and IS- pins. Referring to Figure 8, the time constant of the R2.C1 filter should be set larger than the L/R1 time constant under worst case tolerances, to prevent overshoot in the sensed voltage and tripping the current limit too low. Resistor R3 of value equal to R2 is added for bias current cancellation. R2 and R3 should not be made too large, to reduce errors from bias current offsets. For typical L/R time constants, a 0.1  $\mu F$  capacitor for C1 will allow R2 to be between 1.0 k and 10 kΩ

The current limit without R4 and R5, which are optional, is given by 60 mV/R1, where R1 is the internal resistance of the inductor, obtained from the manufacturer. The addition of R5 can be used to decrease the current limit to a value given by:

$$I_{I IM} = (60 \text{ mV} - (V_{OUT} \times R3/(R3 + R5))/R1$$

where V<sub>OUT</sub> is the output voltage.

Similarly, omitting R5 and adding R4 will increase the current limit to a value given by:

$$I_{I IM} = 60 \text{ mV/R1} \times (1 + \text{R2/R4})$$

Essentially, R4 or R5 are used to increase or decrease the inductor voltage drop which corresponds to 60 mV at the IS+ and IS- pins.

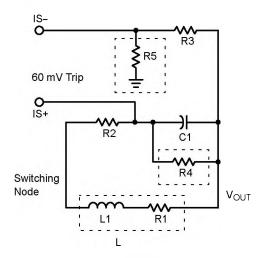


Figure 8. Current Limit

#### **Boost Component Selection for Upper FET Gate Drive**

The boost (BST) pin provides for application of a higher voltage to drive the upper FET. This voltage may be provided by a fixed higher voltage or it may be generated with a boost capacitor and charging diode, as shown in Figure 10. The voltage in the boost configuration would be

the summation of the voltage from the charging diode and the output voltage swing. Care must be taken to keep the peak voltage with respect to ground less than 20 V peak. The capacitor should be large enough to drive the capacitance of the top FET.

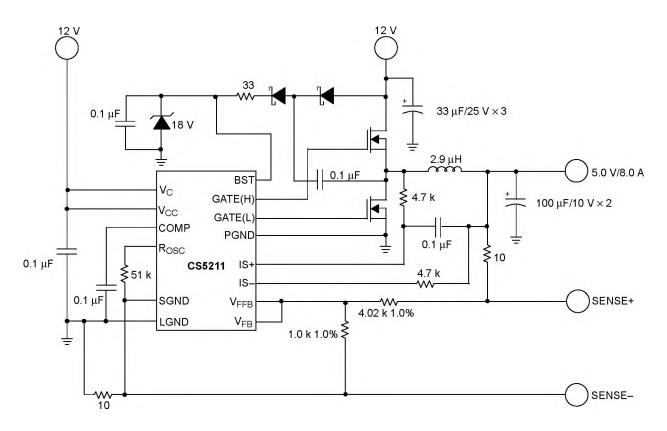


Figure 9. Additional Application Diagram, 12 V to 5.0 V/8.0 A Converter with Differential Remote Sense

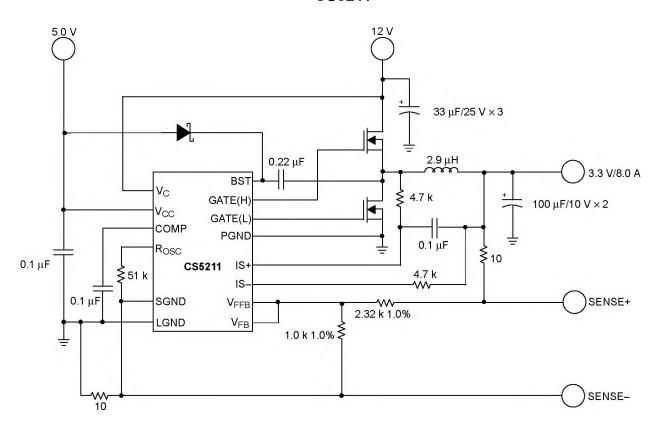


Figure 10. Additional Application Diagram, 12 V to 5.0 V Bias to 3.3 V/8.0 A Converter with Differential Remote Sense

## **ORDERING INFORMATION**

Device	Operating Temperature Range	Package	Shipping
CS5211ED14	400C 4 T 4 950C	SO-14	55 Units/Rail
CS5211EDR14	– 40°C < T <sub>A</sub> < 85°C	SO-14	2500 Tape & Reel
CS5211GD14	000 . T . 7000	SO-14	55 Units/Rail
CS5211GDR14	- 0°C < T <sub>A</sub> < 70°C	SO-14	2500 Tape & Reel